


Kurzanleitung WKB 660 Honda

Arbeiten Sie mit der Maschine seitlich gesehen immer in der Waagerechten. ✓



(Abb: waagerechte Kehrposition)


Die hintere Achse stets in der Höhe nachjustieren, sonst gibt es kein optimales Reinigungsergebnis.

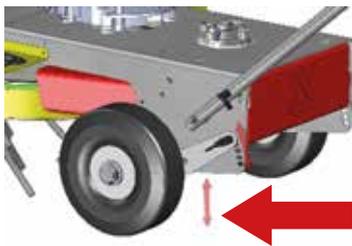

(Abb: Achsverstellung)

Rundumschutz in der Höhe stets nachjustieren. ✓

Einstellschraube

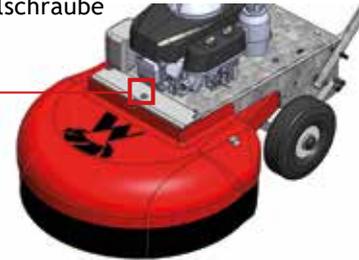

(Abb.: Einstellschraube Rundumschutz)


Wichtig: immer 3 cm Bodenfreiheit gewähren, sonst können die Gummitücher des Rundumschutzes beschädigt werden.

Bodenfreiheit
(ca. 3 cm)



(Abb.: Bodenfreiheit 3 cm)

- Drahtzopfahmen dürfen beim Arbeiten mit der Maschine nirgendwo anschlagen (z.B. am Bordstein). ✓
- Drahtzöpfe rechtzeitig wechseln (bei 30 mm Restlänge)! Drahtzopfahmen dürfen nicht den Boden berühren.
- Nach einem Wechsel der Drahtzöpfe ist darauf zu achten, dass die Arretierung der Miniraster komplett in die Drahtzöpfe greift.

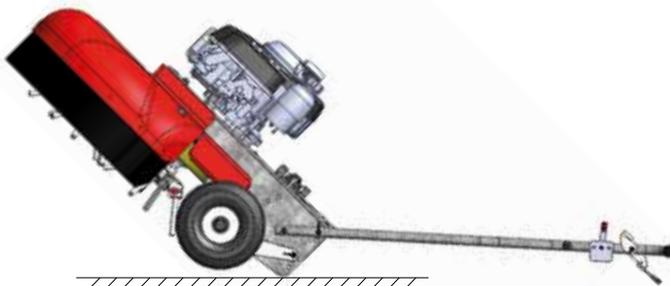

(Abb.: Austausch des Bürstenelements)



(Abb.: Drahtzöpfe wechseln)

Bei Nichtbeachtung kann es zu Schäden oder Folgeschäden an der Maschine kommen. In diesem Fall entfällt der Gewährleistungsanspruch.


Short manual WKB 660 Honda

Always work with the machine in a horizontal position (seen sideways). 



(Fig.: horizontal sweeping position)


As the brushes wear readjust the height of the rear axle to keep the machine horizontal. This optimises brush wear and performance.

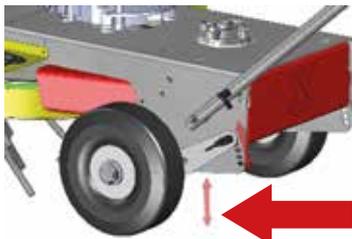

(Fig.: Axis adjustment)

As brushes wear adjust the height of the flexible guard. 


Adjusting screw

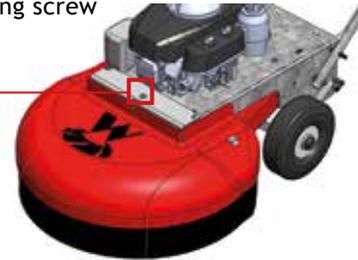

(Fig.: All-round protection adjusting screw)


Important: always allow 3 cm ground clearance, otherwise the flexible guard can be damaged.

Ground clearance (approx. 3 cm)

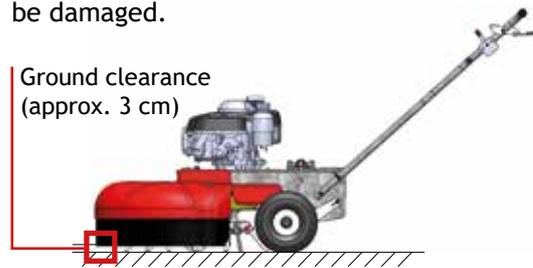

(Fig.: Ground clearance 3 cm)

- Do not bump the brush holders while working with the machine. (e.g. on the curb). 
- Change wire brushes with 30 mm remaining. Do not allow the brush holder to rub on the ground.
- When changing the wire brushes ensure the locking mechanism clicks into place.

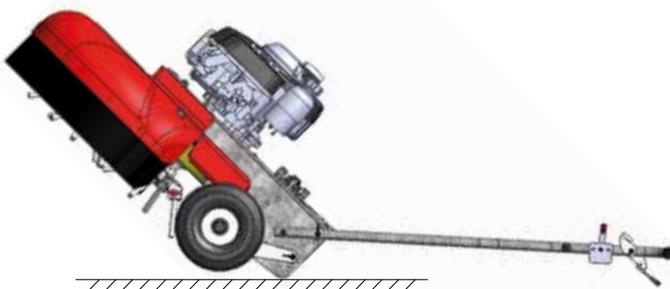

(Fig.: Changing brush elements)



(Fig.: Changing wire braids)

Failure to comply can lead to damage or consequential damage to the machine. In this case the warranty claim does not apply.